

ALCOTEST CHECKLIST

Municipality: STRAITFORD

Alcotest Ser.#: ARNK-0039

County: CAMDEN

Date of Calibration: 01-31-2017

1. **Certificate of Accuracy Alcotest 7110 MKIII-C** from Draeger Safety for instrument used in the A.I.R.

2. **Certificate of Accuracy CU34 Unit** on Alcotest Instrument used.
Ser. #: DD4L 53-0163

3. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety for instrument in A.I.R. or equivalent.
Ser. #: DD4J P2-030

4. **Digital Temperature Measuring System Report of Calibration.**
Ser. #: 150671438

5. A. Alcotest 7110 Calibration Record
 B. Alcotest 7110 Calibration Certificate **Part I - Control Tests.**
 C. Alcotest 7110 Calibration Certificate **Part II - Linearity Tests.**
 D. **Alcotest Card** of operator/coordinator who performed tests.
 E. **Certificate of Accuracy Alcotest 7110 Temperature Probe** from Draeger Safety used in the Calibration Tests ["Black Key" probe of Breath Test Coordinator].
Ser. #: DDXK P2-390

6. **Certificates of Analysis** for each **Simulator Solution** used in Calibration/Linearity Tests:

<input checked="" type="checkbox"/> A.	0.04% Solution.	<u>16230</u>
<input checked="" type="checkbox"/> B.	0.08% Solution.	<u>16250</u>
<input checked="" type="checkbox"/> C.	0.10% Solution.	<u>16220</u>
<input checked="" type="checkbox"/> D.	0.16% Solution.	<u>16260</u>

7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:

7. Certificate of Accuracy Alcotest CU34 Simulators from Draeger Safety (when conducting the Calibration/Linearity Tests) for:

A. 0.04% used in Calibration/Linearity Testing DDCB-0001
 B. 0.08% used in Calibration/Linearity Testing DDCB-0002
 C. 0.10% used in Calibration/Linearity Testing.
[Same as CU34 unit on instrument.]
 D. 0.16% used in Calibration/Linearity Testing DDBN-0007

8. A. New Standard Solution Report following Calibration.
 B. Calibrating CU34 Unit for same [same as CU34 unit on instrument].
 C. Certificate of Analysis 0.10% solution for same.
Lot #: 15 H 140
 D. Alcotest card of operator/coordinator who completed change.
02-09-2017

Dräger

Alcotest® 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.

Certification Date:

1-19-17

SERIAL NUMBER:

ARNK-0039

Draeger Safety Diagnostics, Inc.

BC



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDUL53-0163

Certification Date

9-13-16

Technician

BC

Re-Certification Due Date

9-13-17

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST).

The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification.

For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDUSP2-030

Certification date:

9-12-16

Next Certification due:

9-12-17

Probe Value

97

Draeger Safety Diagnostics, Inc.
Technical Service Department

BC



Calibration
Certificate No. 1750.01

Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-7039468

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, LLC, Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road, Radnor, PA 19087

Instrument Identification:

Model: 61220-601 S/N: 150671438 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-256	B01375		
Temperature Probe	128	4/02/16	15-A0P2S-40-1
Thermistor Module	A17118	3/03/16	1000371058
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	3/03/16	1000371058
Temperature Probe	3039	4/02/16	15-A0P2S-20-1
Temperature Calibration Bath TC-231	A79341		
Thermistor Module	A27129	11/04/15	1000365407
Temperature Probe	5202	11/19/16	6-CV9Y2-1-1
Temperature Calibration Bath TC-309	B3A444		
Thermistor Module	A27129	11/04/15	1000365407
Temperature Probe	5267	11/19/16	6-CV9Y0-1-1

Certificate Information:

Technician: 68 Procedure: CAL-06 Cal Date: 9/09/15 Due Date: 9/09/17
 Test Conditions: 24.7°C 45.0 %RH 1014 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		0.001	0.001	Y	-0.049	0.051	0.013	3.8:1
°C		N.A.		25.001	25.000	Y	24.951	25.051	0.014	3.6:1
°C		N.A.		50.000	50.000	Y	49.950	50.050	0.014	3.6:1
°C		N.A.		100.002	99.998	Y	99.952	100.052	0.014	3.6:1

This Instrument was calibrated using Instruments Traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±(Max-Min)/2; Min = As Left Nominal(Rounded) - Tolerance; Max = As Left Nominal(Rounded) + Tolerance; Date=MM/DD/YY

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Aaron Justice
Aaron Justice, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
 Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
 Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2006-AD-HOU-RvA
 International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA)


Alcotest 7110 Calibration Record

Equipment


Alcotest 7110 MKIII-C
Location: STRATFORD POLICE DEPT. Serial No.: ARNK-0039
Calibration File No.: 02410 Calib. Date: 01/31/2017 Calib. No.: 00036
Certification File No.: 02330 Cert. Date: 07/06/2016 Cert. No.: 00025
Linearity File No.: 02331 Lin. Date: 07/06/2016 Lin. No.: 00024
Solution File No.: 02409 Soln. Date: 01/19/2017 Soln. No.: 00260
Sequential File No.: 02410 File Date: 01/31/2017

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDUL S3-0163
Control Solution %: 0.100% Expires: 09/07/2018
Solution Control Lot: 16220 Bottle No.: 1197

Coordinator

Last Name: WATSON First Name: MATTHEW MI: R
Signature:  #7078 Badge No.: 7078
Date: 01/31/2017

*Black Key Temperature Probe Serial.....# DDXK P2-398 MRW
*Digital NIST Temperature Measuring System Serial.....# 15-8671438 MRW

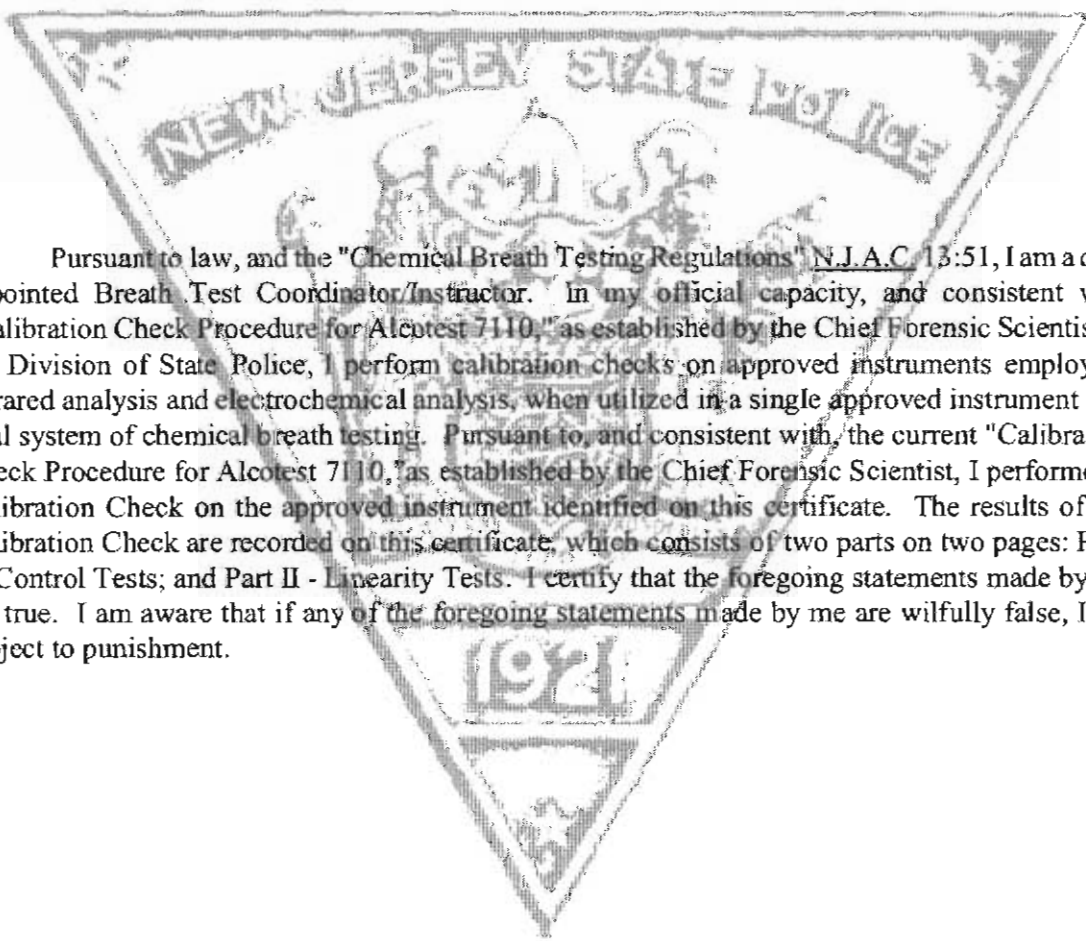

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment

Alcotest 7110 MKIII-C
Location: STRATFORD POLICE DEPT. Serial No.: ARNK-0039
Calibration File No.: 02410 Calib. Date: 01/31/2017 Calib. No.: 00036
Certification File No.: 02411 Cert. Date: 01/31/2017 Cert. No.: 00026
Linearity File No.: 02331 Lin. Date: 07/06/2016 Lin. No.: 00024
Solution File No.: 02409 Soln. Date: 01/19/2017 Soln. No.: 00260
Sequential File No.: 02411 File Date: 01/31/2017

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDUL S3-0163
Control Solution %: 0.100% Expires: 09/07/2018
Solution Control Lot: 16220 Bottle No.: 1197

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	13:54S		
Control 1 EC	0.099%	13:54S	33.9°C	*** TEST PASSED ***
Control 1 IR	0.100%	13:54S	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:55S		
Control 2 EC	0.100%	13:56S	33.9°C	*** TEST PASSED ***
Control 2 IR	0.099%	13:56S	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:56S		
Control 3 EC	0.099%	13:57S	33.9°C	*** TEST PASSED ***
Control 3 IR	0.100%	13:57S	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:57S		

All tests within acceptable tolerance.

Coordinator

Last Name: WATSON

First Name: MATTHEW

MI: R

Signature:  #2028

Badge No.: 7078

Date: 01/31/2017

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARNK-0039
Location: STRATFORD POLICE DEPT.
Calibration File No.: 02410 Calib. Date: 01/31/2017 Calib. No.: 00036
Certification File No.: 02411 Cert. Date: 01/31/2017 Cert. No.: 00026
Linearity File No.: 02412 Lin. Date: 01/31/2017 Lin. No.: 00025
Solution File No.: 02409 Soln. Date: 01/19/2017 Soln. No.: 00260
Sequential File No.: 02412 File Date: 01/31/2017

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDCB-0001
Control Solution %: 0.040% Expires: 09/19/2018
Solution Control Lot: 16230 Bottle No.: 1211

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDCB-0002
Control Solution %: 0.080% Expires: 09/27/2018
Solution Control Lot: 16250 Bottle No.: 0199

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDBN-0007
Control Solution %: 0.160% Expires: 10/03/2018
Solution Control Lot: 16260 Bottle No.: 0612

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	14:05S		
Control 1 EC	0.040%	14:05S	34.0°C	*** TEST PASSED ***
Control 1 IR	0.040%	14:05S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:07S		
Control 2 EC	0.040%	14:07S	34.0°C	*** TEST PASSED ***
Control 2 IR	0.039%	14:07S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:09S		
Control 3 EC	0.080%	14:09S	34.0°C	*** TEST PASSED ***
Control 3 IR	0.079%	14:09S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:10S		
Control 4 EC	0.080%	14:11S	34.0°C	*** TEST PASSED ***
Control 4 IR	0.080%	14:11S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:12S		
Control 5 EC	0.160%	14:13S	34.0°C	*** TEST PASSED ***
Control 5 IR	0.158%	14:13S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:14S		
Control 6 EC	0.160%	14:15S	34.0°C	*** TEST PASSED ***
Control 6 IR	0.159%	14:15S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:16S		

All tests within acceptable tolerance.

Coordinator

Last Name: WATSON

First Name: MATTHEW

MI: R

Signature: T pr II

 # 7078

Badge No.: 7078

Date: 01/31/2017

DEPARTMENT OF
Water and Public Safety
This is to certify that

Matthew R. Watson
Breath Test Coordinator/Instructor

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE A METHOD TO DETERMINE INTOXICATION.
Alcotest 7110 MKIII-C

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 8th DAY OF June
TWO THOUSAND AND Sixteen

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ACTING ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1.		
2.		
3.		
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 2938 (Rev. 08/13)

DEPARTMENT OF
Water and Public Safety
This is to certify that

Matthew R. Watson
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE A METHOD TO DETERMINE INTOXICATION.
Alcotest 7110 MKIII-C

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 19th DAY OF August
TWO THOUSAND AND Ten

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1. 11-8-12	SCPA	Wm Kern
2. 7/14/15	CMFA	Adam Gander
3.		
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 2938 (Rev. 03/10)



State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

CHRISTOPHER S. PORRINO
Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0469 to 0.0499 grams per 100 milliliters of solution.

MANUFACTURER: Dräger Safety, Inc.

ANALYSIS DATE: 09/27/2016

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 16230

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0484 to 0.0492 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 19, 2018.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaouie, Ph.D,
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 28th day of September, 2016.

Notary
MARY ELIZABETH MCLAUGHLIN
ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2016



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAÑO
Lt. Governor

CHRISTOPHER S. PORRINO
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0939 to 0.0997 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/04/2016

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 16250

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0965 to 0.0975 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 27, 2018.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Signature]
Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2016.

[Signature]
Notary

MARY ELIZABETH MCLAUGHLIN
ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

CHRISTOPHER S. PORRINO
Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 09/19/2016

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 16220

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1202 to 0.1207 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 07, 2018.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Signature]
Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 19th day of September, 2016.

[Signature]
Notary

MARY ELIZABETH MCLAUGHLIN
ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

CHRISTOPHER S. PORRINO
Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1878 to 0.1994 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/13/2016

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 16260

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1928 to 0.1964 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is October 3, 2018.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Handwritten signature]

Ali M. Alaouie, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 17 day of October, 2016.

[Handwritten signature]
Notary
JOHN R LEAVER
ID # 2207138
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 14, 2017



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer.
Printed on Recycled Paper and Recyclable





Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDCB-0001

Certification Date

Technician

Re-Certification Due Date

09-23-16

RA6

09-23-17



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDCB-0002

Certification Date


Technician

Re-Certification Due Date

10-4-16

72

10-4-17

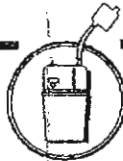

Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDBN - 0007

Certification Date

Technician

Re-Certification Due Date

09-28-16

VAG

09-28-17

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

Certification date:

Next Certification due:

DDXK PL-390

09-30-16

09-30-17

Probe Value

104

Draeger Safety Diagnostics, Inc.
Technical Service Department

KAG

Calibrating Unit

New Standard Solution Report

Equipment Alcotest 7110 MKIII-C Serial No.: ARNK-0039
 Location: STRATFORD POLICE DEPT.
 Calibration File No.: 02410 Calib. Date: 01/31/2017 Calib. No.: 00036
 Certification File No.: 02411 Cert. Date: 01/31/2017 Cert. No.: 00026
 Linearity File No.: 02412 Lin. Date: 01/31/2017 Lin. No.: 00025
 Solution File No.: 02413 Soln. Date: 01/31/2017 Soln. No.: 00261
 Sequential File No.: 02413 File Date: 01/31/2017

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDUL S3-0163
 Control Solution %: 0.100% Expires: 08/04/2017
 Solution Control Lot: 15H140 Bottle No.: 0171

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	15:22S		
Control 1 EC	0.103%	15:22S	33.9°C	*** TEST PASSED ***
Control 1 IR	0.100%	15:22S	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:23S		
Control 2 EC	0.102%	15:24S	33.9°C	*** TEST PASSED ***
Control 2 IR	0.099%	15:24S	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:24S		
Control 3 EC	0.103%	15:25S	33.9°C	*** TEST PASSED ***
Control 3 IR	0.101%	15:25S	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	15:25S		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDUJPA-838 MRW

Changed By:

Last Name: WATSON First Name: MATTHEW MI: R

Signature:  #7078 Badge No.: 7078
 Date: 01/31/2017



State of New Jersey
OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

JOHN J. HOFFMAN
Acting Attorney General

KIM GUADAGNO
Lt. Governor

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 09/02/2015

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 15H140

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1209 to 0.1215 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 04, 2017.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaouie, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 11th day of September, 2015.

Notary

MARY ELIZABETH MCLAUGHLIN

ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable

